


# harmony<sup>®</sup>

## Urban<sup>™</sup> Deluxe

### MICROFOLD PUSHCHAIR

## INSTRUCTION MANUAL

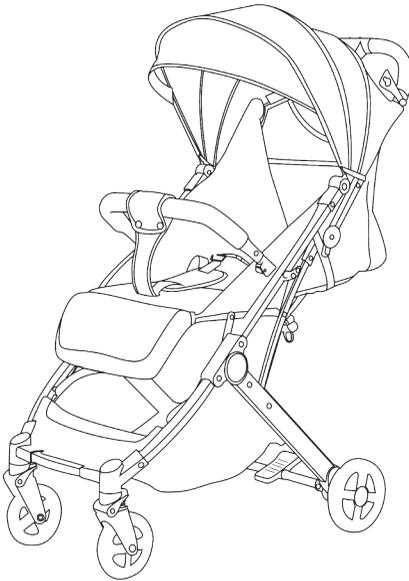

max 15 kg

This pushchair is intended for children  
from birth up to 36 months (or a maximum weight of 15 kg)

---

Complies with BS EN 1888-1:2018.

**IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

Your child's safety may be affected if you do not follow these instructions.



**IF YOU HAVE ANY PROBLEMS, PLEASE DO NOT  
RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.  
PLEASE CONTACT HARMONY CUSTOMER SERVICE AT  
+44 (0) 1704 549881 OR AT [WWW.HARMONYJUVENILE.COM](http://WWW.HARMONYJUVENILE.COM)**

## WARNINGS



**IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE. Read all instructions BEFORE use of product. Your child's safety may be affected if you do not follow these instructions.**

**THIS PRODUCT IS DESIGNED FOR CHILDREN FROM BIRTH TO 36 MONTHS (OR A MAXIMUM WEIGHT OF 15 KG).**

Complies with BS EN 1888-1:2018.

Only replacement parts supplied or recommended by Harmony Juvenile Products shall be used.

### GENERAL WARNINGS

#### **WARNING!**

**FAILURE TO PROPERLY READ, FOLLOW AND USE THESE INSTRUCTIONS AND THE PUSHCHAIR LABELS INCREASES THE RISK OF SERIOUS INJURY OR DEATH. FOR YOUR CHILD'S SAFETY, FOLLOW ALL LABELS ON THIS PUSHCHAIR AND IN THESE WRITTEN INSTRUCTIONS. DO NOT INSTALL OR USE THIS PUSHCHAIR UNTIL YOU READ AND UNDERSTAND THE WARNINGS AND ASSEMBLY INSTRUCTIONS.**

#### **WARNING!**

**NEVER LEAVE A CHILD UNATTENDED. NEVER** leave children alone in this pushchair under any circumstance. **ALWAYS** keep child in view while in pushchair.

#### **WARNING!**

**PLACING PARCELS, ACCESSORIES OR OTHER ITEMS ON THE PUSHCHAIR OR ANY OF ITS PARTS (INCLUDING HANGING ON THE HANDLEBAR), MAY CAUSE THE UNIT TO BECOME UNSTABLE AND MAY LEAD TO SERIOUS INJURY OR DEATH.**

**! KEEP INSTRUCTIONS FOR FUTURE USE.**

**! WARNING** Never leave the child unattended.

**! WARNING** Ensure that all the locking devices are engaged before use.

**! WARNING** To avoid injury ensure that the child is kept away when unfolding and folding this product.

**! WARNING** Do not let the child play with this product.

**! WARNING** Always use the restraint system.

**! WARNING** Check that the pushchair is correctly engaged before use.

**! WARNING** This product is not suitable for running or skating.

**! WARNING** Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.

**! WARNING** Parking device shall be engaged when placing and removing the children.

**! REMOVE** packing materials and polybags, and dispose of them before assembly. Plastic bags can cause suffocation. Keep plastic bags away from children.

**! Adult assembly required. DO NOT** use this pushchair without properly assembling it.

**! This product must only be used by an adult.**

**! DO NOT EXCEED THE MANUFACTURER'S RECOMMENDED LOAD** as this pushchair can become unstable and cause serious injuries.

**! DO NOT** allow children to play with this pushchair.

**! PARTS OF THIS PUSHCHAIR COULD BECOME HOT ENOUGH TO BURN THE CHILD IF LEFT IN THE SUN.** Contact with these parts can injure your child. **ALWAYS** touch the surface of any metal or plastic part before putting your child in the pushchair.

**! DO NOT** use this pushchair if it is damaged in any way or has missing parts.

**! DO NOT** tamper with or modify the pushchair for any reason.

**! DO NOT, EXCEPT AS DESCRIBED IN THESE INSTRUCTIONS, MODIFY YOUR PUSHCHAIR, DISASSEMBLE ANY PART OR CHANGE THE WAY THE HARNESS BELTS ARE USED.** This includes adding any parts or accessories by other manufacturers as non-tested accessories can affect the safety of the pushchair.

**! Only replacement parts supplied or recommended by Harmony Juvenile Products shall be used.**

**! It is recommended to routinely inspect, maintain, clean and/or wash your pushchair.**

**! In some climates mould and mildew can affect the fabric. To avoid this, DO NOT** fold the pushchair when it is wet. Leave it open in a ventilated area until completely dry.

**! ALWAYS** store the pushchair in a dry place.

**! When storing the pushchair in the car, NEVER** place other items on top of it.

**! DO NOT** use the pushchair on the beach.

### HARNESS SYSTEM WARNINGS

#### **WARNING!**

**AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE THE HARNESS PROVIDED.**

**! Children should be HARNESSED** every time you use this pushchair.

**! Snugly adjust harness around child.**

### FINGER ENTRAPMENT WARNINGS

**! AVOID SERIOUS INJURY** by keeping fingers away from the pushchair when folding, unfolding or adjusting the pushchair and canopy.

**! ALWAYS** keep hands and fingers away from moving parts to prevent finger entrapment and pinching injuries.

## USAGE WARNINGS

- ! **THE BACKREST MUST BE COMPLETELY RECLINED FOR CHILDREN FROM BIRTH UP TO 6 MONTHS.**
- ! **ENSURE** that pushchair is completely **LOCKED IN THE OPEN POSITION** prior to use.
- ! **ALWAYS** use the brakes when pushchair is stopped. **ENSURE** the brakes are fully engaged before releasing the pushchair.
- ! **NEVER** use the pushchair on stairs or escalators. Incorrect use of a pushchair is the most common mistake people make which can lead to serious injuries. Use your pushchair in the way it was intended for use, and be extra careful when going up or down (e.g. a curve), or on other uneven places or in unstable conditions.
- ! **NEVER** run or rollerblade with your pushchair. The pushchair should be used at **WALKING SPEED**. The pushchair **CANNOT** be used at higher speeds while jogging, skating, etc.
- ! **NEVER** allow a child to fold, unfold or adjust the pushchair to prevent injuries.
- ! This pushchair is for use with **ONE CHILD AT A TIME**.
- ! The tyres may leave black marks on some floors (particularly on smooth floors such as parquet, synthetic laminates, linoleum, etc.).
- ! **DO NOT** use excessive force when folding the pushchair. If you are having problems, fully open the pushchair and repeat the folding procedure.
- ! **ALWAYS** let wheels down as gently as possible when mounting and dismounting kerbs.
- ! **ALWAYS** fold the pushchair when going up or down stairs. Never bump the pushchair over these or similar obstacles.
- ! **ENSURE** brakes are engaged when placing and removing children from the pushchair.
- ! **DO NOT** overload the storage basket. Maximum weight 2 kg.

## TIPPING WARNINGS

- ! **NEVER** allow children to climb into the pushchair unassisted. Pushchair may tip over and injure child. Lift a child in and out of the pushchair.
- ! **DO NOT** allow a child to stand on the footrest or feet.
- ! **NEVER** allow children to hang onto the pushchair.
- ! **NEVER** place / hang bags, purses, parcels, etc. or any accessory on the handlebar or any other pushchair parts as it could cause the pushchair to become unstable.
- ! **NEVER** place anything on the canopy as this can cause the canopy to collapse and seriously injure your child.


## CERTIFICATIONS

Harmony Juvenile Products certifies the compliance of this pushchair to *to BS EN 1888-1:2018*.

Harmony Juvenile Products has also validated compliance through independent laboratory testing.

Imported by Harmony Juvenile Products, 10 Beach Priory Gdns., Southport, UK, PR8 1RT, +44 (0) 1704 549881.

## UNFOLDING PUSHCHAIR

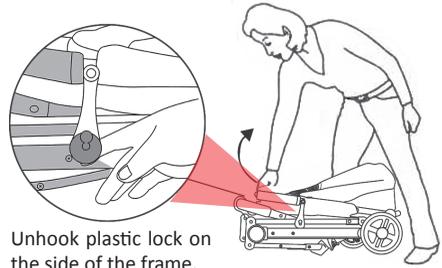

Unhook plastic lock on the side of the frame.


Lift pushchair handle and pull up to unfold pushchair.

! **WARNING: DO NOT** force the pushchair to open.



! **WARNING: ENSURE** the pushchair is fully opened and locked by gently pushing/pulling on the handlebar.

## FITTING REAR WHEELS


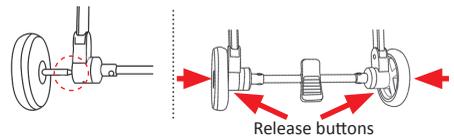


Install each rear wheel (x2) to its corresponding hole on rear locking bar as shown. Press release button to remove each wheel.


## APPLYING/RELEASING BRAKES

Step down on the brake lever to lock rear wheels. Lift up lever to unlock rear wheels.

**! WARNING:** Apply the brakes each time you park the pushchair.

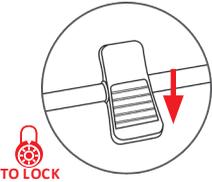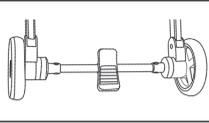


## INSTALLING BUMPER BAR

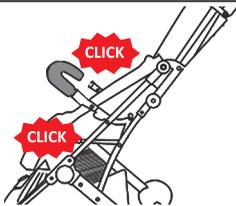

Attach the front bumper by aligning anchors with the slots at the ends of the armrests.


**! WARNING:** NEVER use the bumper bar to lift the pushchair up with the child sitting in it.

## FITTING FRONT WHEELS

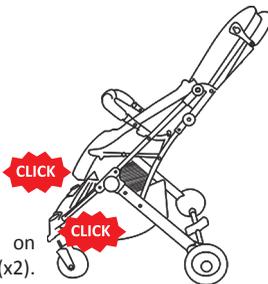

Install front wheels on front bars as shown (x2). A 'click' should be heard in ensure wheel is fully installed. Press release button to remove each wheel.

## CANOPY

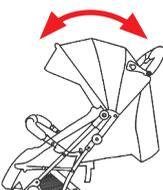

Open the canopy by pulling the canopy out.

Pull back canopy to close.

To use sun visor, pull out from front of canopy.


To open canopy vent section, locate clip on back of canopy and fasten.

## ADJUSTING HARNESS

Place child in the pushchair seat and adjust height to shoulder level.


With the crotch strap between the child's legs, secure both buckles as shown ①.

**ADJUST** the harness snugly around your child. Slide the adjusters on both the waist and shoulder straps to tighten or loosen the harness system ②.

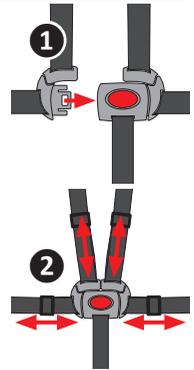

## RECLINE


Locate the recline adjustment belt behind the backrest. Press on clips and release slack to lower the backrest.

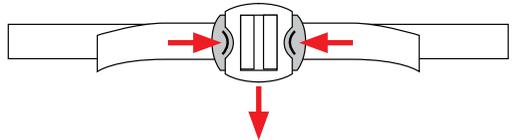

## ! WARNING!

**ENSURE THE BACKREST IS FULLY RECLINED FOR INFANTS 0 - 6 MONTHS OR UNTIL THEY CAN SIT UPRIGHT UNASSISTED.**

 Pull on both straps to raise the backrest.




## FOOTREST



To raise footrest, lift up until it is locked into place.

To lower footrest, squeeze wedge button from each corner under footrest and lower.


**! WARNING:** The footrest should NEVER be used as a step when getting into/out of the pushchair.

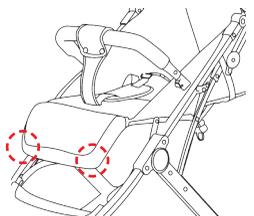

## FOLDING PUSHCHAIR

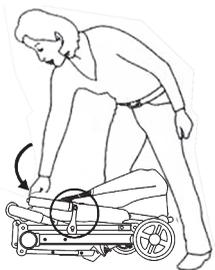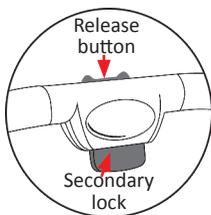

**ENSURE** canopy is closed and footrest is lowered. While holding in (squeezing) secondary lock button, press release button on pushchair handle and push forward to fold. When folded, hook plastic lock back onto the side frame.

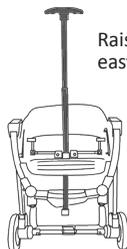

Raise handle for easy portability.



## CARE AND MAINTENANCE

### CLEANING THE CHASSIS:

- The pushchair must be maintained regularly to provide full satisfaction. We advise you to regularly check mechanical parts for cleaning, if necessary.
- Wipe the frame with a clean cloth. Clean and dry the chassis thoroughly every time the pushchair has been in muddy and sandy areas.
- Do not grease or oil.
- The pushchair may not work properly if not regularly maintained.
- Do not force it if the pushchair is difficult to fold or unfold. If difficulties persist, contact Harmony Customer Service at +44 (0) 1704 549881 or at [www.harmonyjuvenile.com](http://www.harmonyjuvenile.com).

### CLEANING THE FABRIC:

- Use a sponge and mild soap. Do not use detergent.

## WARRANTY

This product was manufactured by Harmony Juvenile Products® (HJP). HJP warrants this product to the original retail purchaser as follows:

### LIMITED 1-YEAR WARRANTY

This product is warranted against defective materials and workmanship for one year from the date of original purchase. An original receipt is required to validate your warranty. HJP will, at its option, provide replacement parts for this product or replace this product. HJP reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions.

To make a claim under this warranty, you must contact HJP Customer Service at [www.harmonyjuvenile.com](http://www.harmonyjuvenile.com), or call +44 (0) 1704 549881, or write to 10 Beach Priory Gdns., Southport, UK, PR8 1RT.

Proof of purchase is required and shipping charges are the responsibility of the consumer.

### WARRANTY LIMITATIONS

This warranty does not include damages which arise from negligence, misuse, or use not in accordance with this instruction manual.

### LIMITATIONS OF DAMAGES

The warranty and remedies as set forth above are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will HJP or the retailer selling this product be liable to you for any damages, including incidental or consequential damages, or loss of use arising out of the use or inability to use this product.

**PLEASE REGISTER THIS PRODUCT WITHIN 30 DAYS OF PURCHASE TO EXPEDITE WARRANTY CLAIMS AND TO VERIFY ORIGINAL DATE OF PURCHASE.**